

Eurolan Power Distribution Unit (PDU) User Manual

EUROLAN

© Copyright Eurolan AB

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from the publisher.



SEC.RU

ПОРТАЛ ПО БЕЗОПАСНОСТИ

Table of Contents

1. Introduction.....	1
2. PDU Package	2
3. Function	3
4. Installation	4
5. Web Interface	9



SEC.RU

ПОРТАЛ ПО БЕЗОПАСНОСТИ

1. Introduction

The PDU is an Internet ready device designed and is equipped with an intelligent current-meter (True RMS) that will indicate the total power consumption of a power strip.

The PDU offers an easy set up and user-friendly communication software. This software provides the function that assistant manager to remotely monitor the multiple PDU power consumption to realize the total current power consumption and utilization for the enterprises.

Features:

- Built-in web server
- Real time to monitoring the current consumption of the power strip
- Build-in true RMS current meter
- Setup easily, meter can read the IP address directly
- Homepage support SSL
- Provide audible alarm when the power consumption over the threshold of warning and overload
- Send the email and traps when the power consumption exceed the trigger value of warning or overload to the PDU
- Provide utility, it can monitor a large mount of PDU at the same time
- Support the SNMP and provide MIB for the PDU to be monitored by NMS
- Provide per outlet power protection by the circuit breaker
- Real time to control outlets of PDU
- Indicate outlets status with LED
- Support power on sequence
- Option accessory can support temperature and humidity detection

2. PDU Package

The standard PDU package contains a Power Distribution Unit with supporting hardware and software. The components of the package are:

- Power Distribution Unit and Cord
- Rack mount Brackets
- CD-ROM with User Manual, PDU Software, MIB: Management Information Base for Network (PDUMIB.mib)

3. Function

Interface

Single current bank



Functions	Description
Ethernet	RJ45 port for network communication port.
Audible Alarm	Warning- 1 beep in 1 second. Overload- 3 beeps in 1 second. Note: The audible alarm will keep beeping until the current gets back to normal and the current is lower than the threshold to 0.5 amps.
Function Button	● Press and release to turn off the warning beeping. The overload beeping can not be cancelled. ● Press and hold the key after 2 beeping; it can let the meter to show up the IP address ● Press and hold the key after 4 beeping; it can change the way to get IP by DHCP or fixed IP. ● Press and hold the key after 6 beeping; it can reset PDU back to default setting.
Meter	3 digits to display current and IP Address.
ID	The identification of power bank or PDU.
LED Indicator	SSL (yellow): Light on means web access is protected by SSL. DHCP (Green): Light on means PDU gets IP address by DHCP. PDU (Green): Indicate each output power status. Status (Red): Indicate each circuit status. (by model)
ENV	RJ11 for ENV probe attached.
Circuit Breaker	Overload power protection.

4. Installation

This section will provide a quick instruction to install the PDU.

Rack Mount Instructions

A) Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature specified by the manufacturer.


B) Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.

C) Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

D) Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

E) Reliable Earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips)."

Diagram

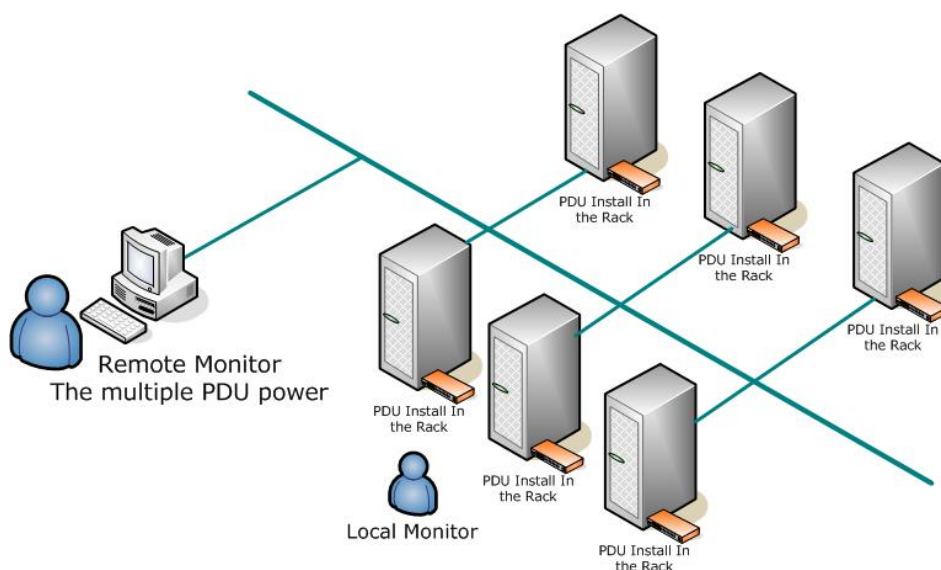


Hardware

1. Install mounting brackets.


The PDU comes with brackets for mounting in a rack. To mount the PDU into a rack performs the following procedure:

1.1 Attach the mounting brackets to the unit, using the four retaining screws provided for each of the brackets.


Horizontal
:

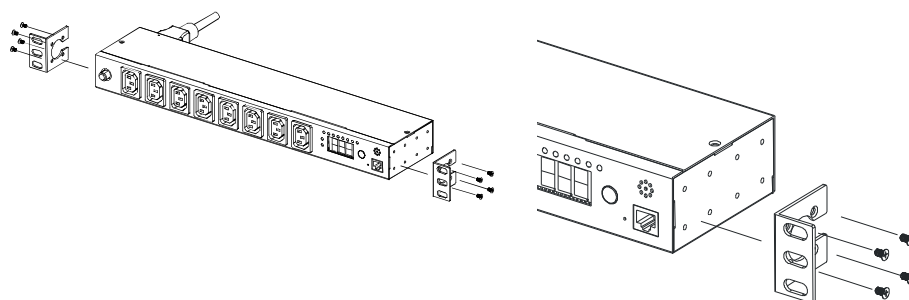


Vertical 1

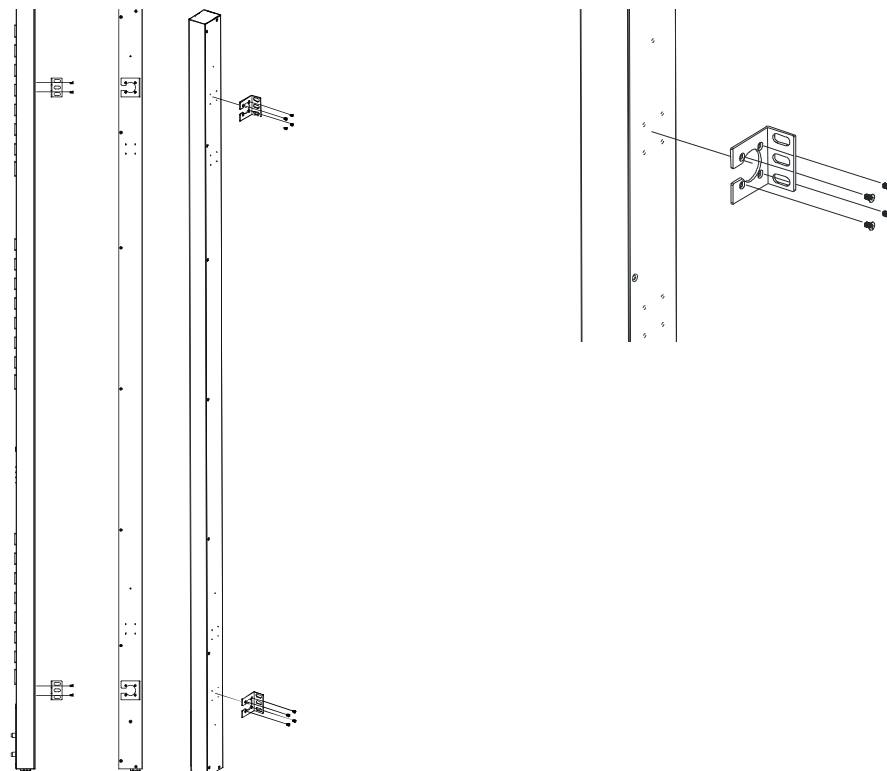

Vertical 2

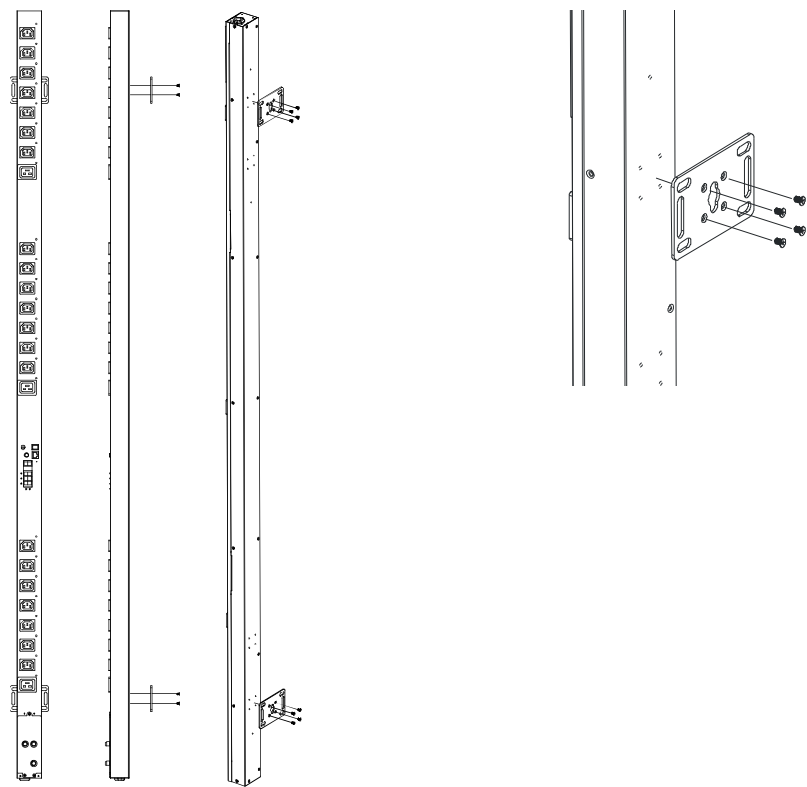


Vertical 3

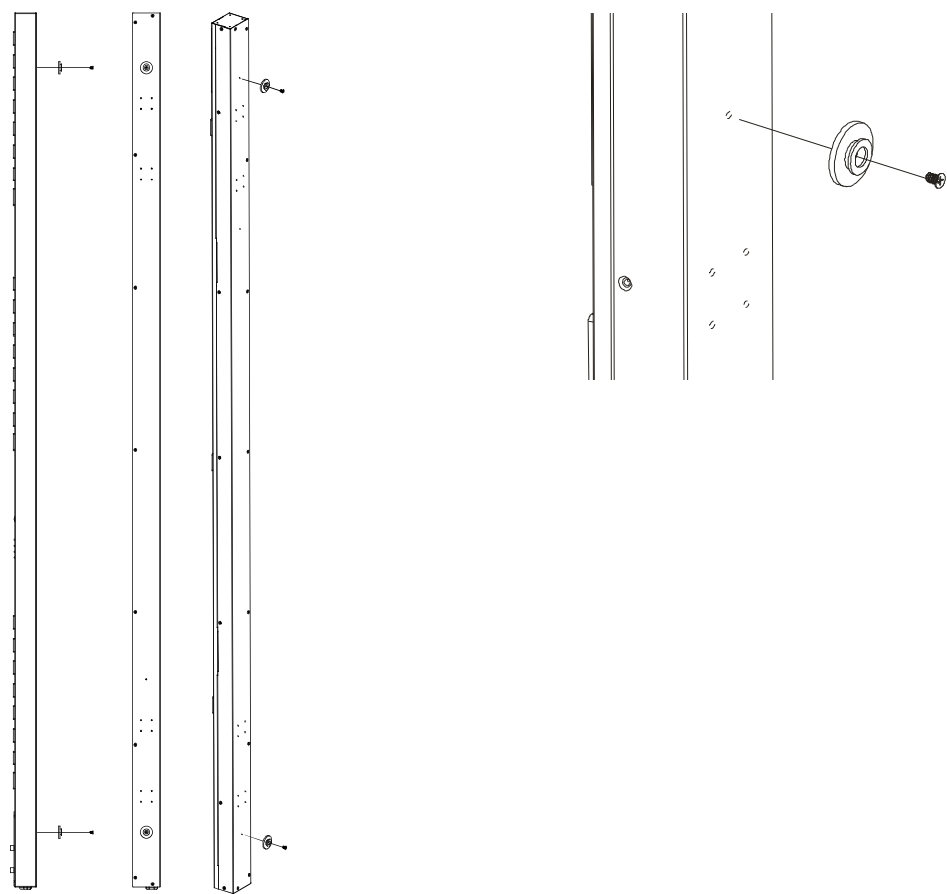


1.2 Choose a location for the brackets.

1.3 Align the mounting holes of brackets with the notched hole on the vertical rail and attach with the retaining screws.


Horizontal:

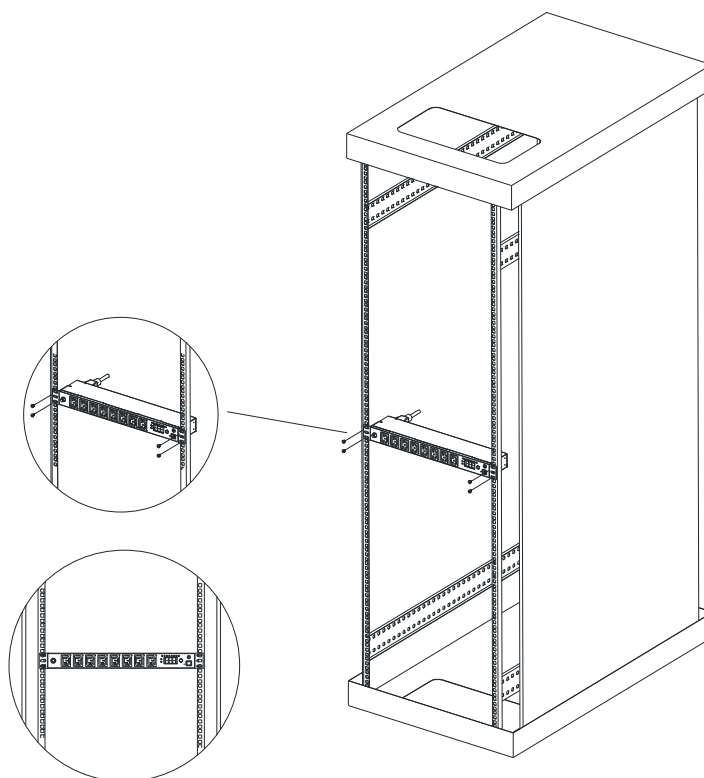


Vertical 1

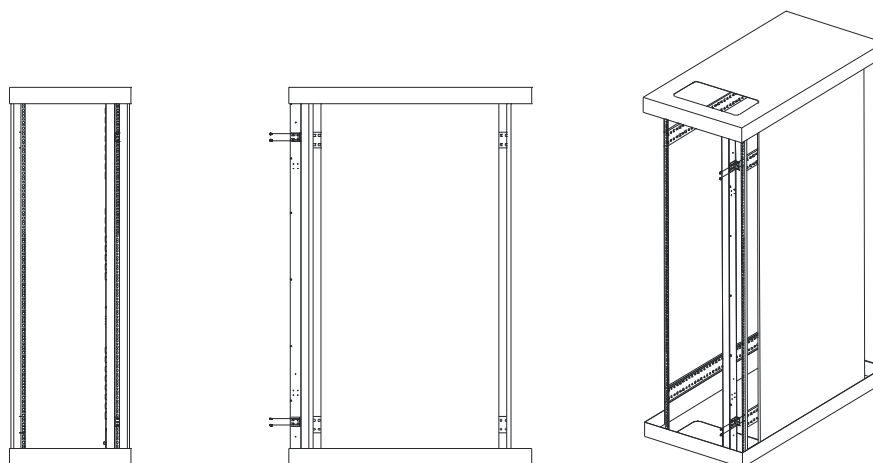

Vertical 2

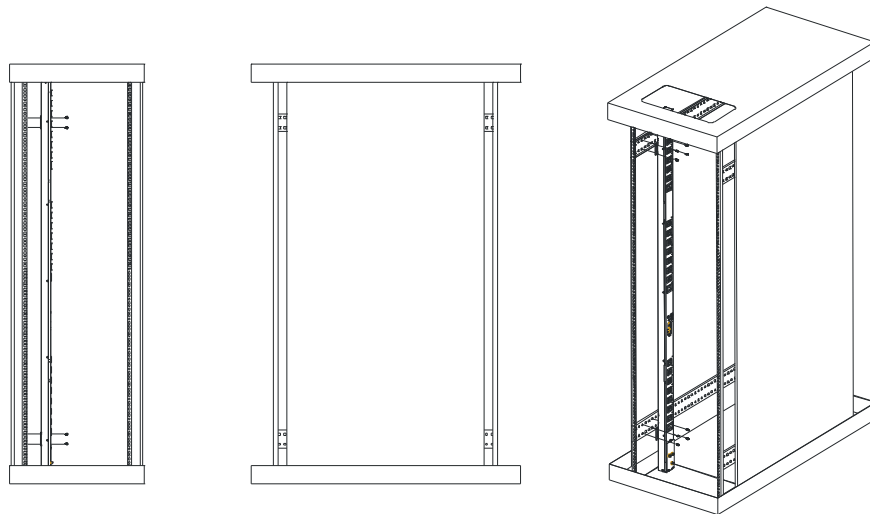

Vertical 3

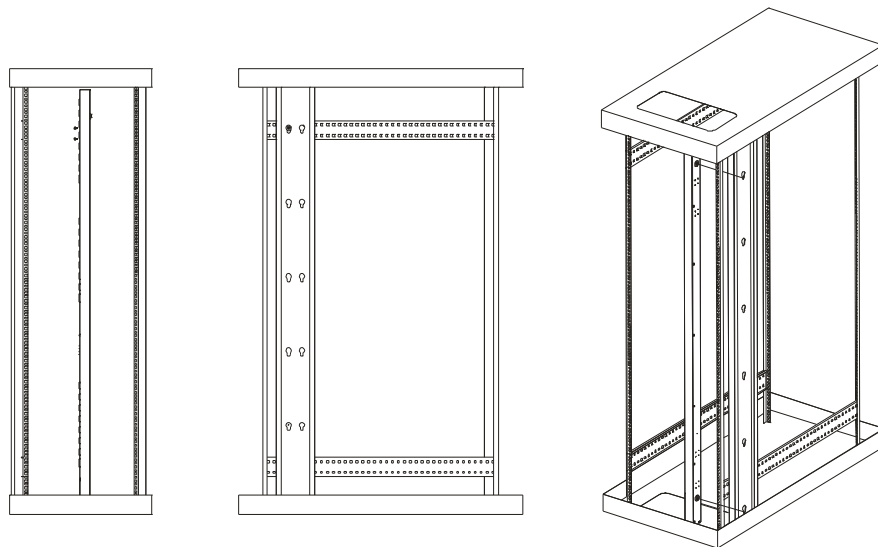

2. Connect input and output power.
3. Connect Ethernet cable to the PDU.
4. Switch on the PDU.

Note 1:

The default setting for the way to get IP address is DHCP. If PDU can not get the IP from DHCP server, the IP address will stay at 192.168.0.216

Note 2:

TO SETUP THE NETWORK SYSTEM FOR PDU, STRONGLY RECOMMEND TO BUILD UP THE POWER MONITORING NETWORK SYSTEM ISOLATED WITH THE OTHERS, IN ORDER TO KEEP THE STABILITY OF GETTING POWER INFORMATION AND SYSTEM OPERATION.


5. Web Interface

Login:

Input the PDU IP address in web browser.

Default ID is snmp

Password is 1234

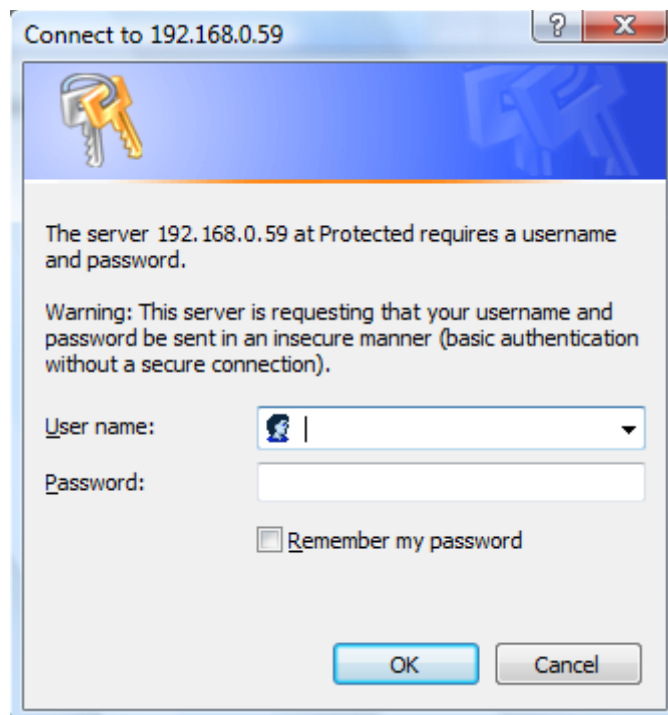

Information: PDU

Display total PDU and each outlet power consumption.

When plug the option device - ENV probe, it will display temperature and humidity information.

EUROLAN		
Total load: 0.0 A , Status: Normal		
Information	PDU	
PDU	PDU	0.0 A Normal
System		
Control	Threshold	
Outlet		
Configuration	Warning	12.0 A
	Overload	16.0 A
PDU		
Threshold		
User		
Network		
Mail		
SNMP		
SSL		

Information: System

Indicate PDU system information, including:

Model No.

Firmware Version

MAC Address

System Name

System Contact

Location

EUROLAN		
Total load: 0.0 A , Status: Normal		
Information	Model No.	60A-65-55-08BL
PDU	Firmware Version	s4.82-091012-1cb08s
System	MAC Address	00:06:18:75:23:91
Control	System Name	PDU
Outlet	System Contact	Admin
Configuration	Location	Office
PDU		Apply
Threshold		
User		
Network		
Mail		
SNMP		
SSL		

Control: Outlet

Indicate PDU outlet on/off status and control outlet.

Select the outlet by checking the box and then click ON or OFF button to control output power for PDU

Monitored PDU series does not support this function.

ON: Press the icon to turn on the assigned outlets.

OFF: Press the icon to turn off the assigned outlets.

OFF/ON: Press the icon to reboot the assigned outlets.

EUROLAN

Total load: 0.0 A , Status: Normal

Information
[PDU](#)
[System](#)

Control
Outlet

Configuration
[PDU](#)
[Threshold](#)
[User](#)
[Network](#)
[Mail](#)
[SNMP](#)
[SSL](#)

PDU	Status	
OutletA	ON	☐
OutletB	ON	☐
OutletC	ON	☐
OutletD	ON	☐
OutletE	ON	☐
OutletF	ON	☐
OutletG	ON	☐
OutletH	ON	☐

ON

OFF

OFF/ON

Configuration: PDU

Set the outlet name and delay time.

Name: Rename the outlet.

ON: Set delay time for power on sequential.

OFF: Set delay time for power off sequential.

Note: The maximum delay time is 255 seconds.

EUROLAN			
Total load: 0.0 A , Status: Normal			
Information	Name	ON Delay(sec)	OFF Delay(sec)
PDU	OutletA	1	1
System	OutletB	2	2
Control	OutletC	3	3
Outlet	OutletD	4	4
Configuration	OutletE	5	5
PDU	OutletF	6	6
Threshold	OutletG	7	7
User	OutletH	8	8
Network			
Mail			
SNMP			
SSL			

Note : After PDU is plugged into main power, PDU system will start to sequentially turn on the output socket according to the pre-set delay time in PDU web interface. The factory default setting for delay time is one second for each outlet; therefore the 8 ports PDU will take 8 seconds, 24 ports PDU will take 24 seconds to complete start-up procedure.

Before the sequence procedure is completed, if a PDU is unplugged from the power source, the outlets which are not turned on will be regarded as remaining at the power-off status. Next time the PDU is plugged into main power, these outlets will not be automatically turned on. These outlets can only be turned on by web interface.

Configuration: Threshold

Set the warning and overload threshold for each circuit.

Set lower and upper threshold for temperature and humidity.

EUROLAN

Total load: 0.0 A , Status: Normal

Information
[PDU](#)
[System](#)

Control
[Outlet](#)

Configuration
[PDU](#)
Threshold
[User](#)
[Network](#)
[Mail](#)
[SNMP](#)
[SSL](#)

Name	Threshold (Amp)	
	Warning	Overload
PDU	12	16

Apply

Configuration: User

Change ID and password.

Default ID is snmp and password is 1234.

EUROLAN

Total load: 0.0 A , Status: Normal

Information
[PDU](#)
[System](#)

Control
[Outlet](#)

Configuration
[PDU](#)
[Threshold](#)
User
[Network](#)
[Mail](#)
[SNMP](#)
[SSL](#)

Original
ID
Password

New
ID
Password

Apply

Configuration: Network

PDU network information

Enable DHCP: Change the way to get IP address for PDU.

EUROLAN

Total load: 0.0 A , Status: Normal

Information
[PDU](#)
[System](#)
Control
[Outlet](#)
Configuration
[PDU](#)
[Threshold](#)
[User](#)
Network
[Mail](#)
[SNMP](#)
[SSL](#)

IP Address
Host Name
IP Address
Subnet Mask
Gateway
☒ Enable DHCP
DNS Server IP
Primary DNS IP
Secondary DNS IP

DIGIBOARD
192.168.0.95
255.255.255.0
192.168.0.254

139.75.253.23
168.95.1.1

PDU User Manual Ver. 2.0

www.eurolan.com

16



SEC.RU

ПОРТАЛ ПО БЕЗОПАСНОСТИ

Configuration: Mail

When event occurs, PDU can send out email message to pre-defined account.

Email Server: The Email Server only support to be input domain name, not IP address.

Sender's Email: Input the sender email address.

Email Address: Input the recipient email address.


The message in the email:

Indicate OutletA~H-XXXXXXX status in order

X=0 : means the power off.

X=1 : means the power on.

Note: Make sure DNS server can resolve the Email Server's domain name.

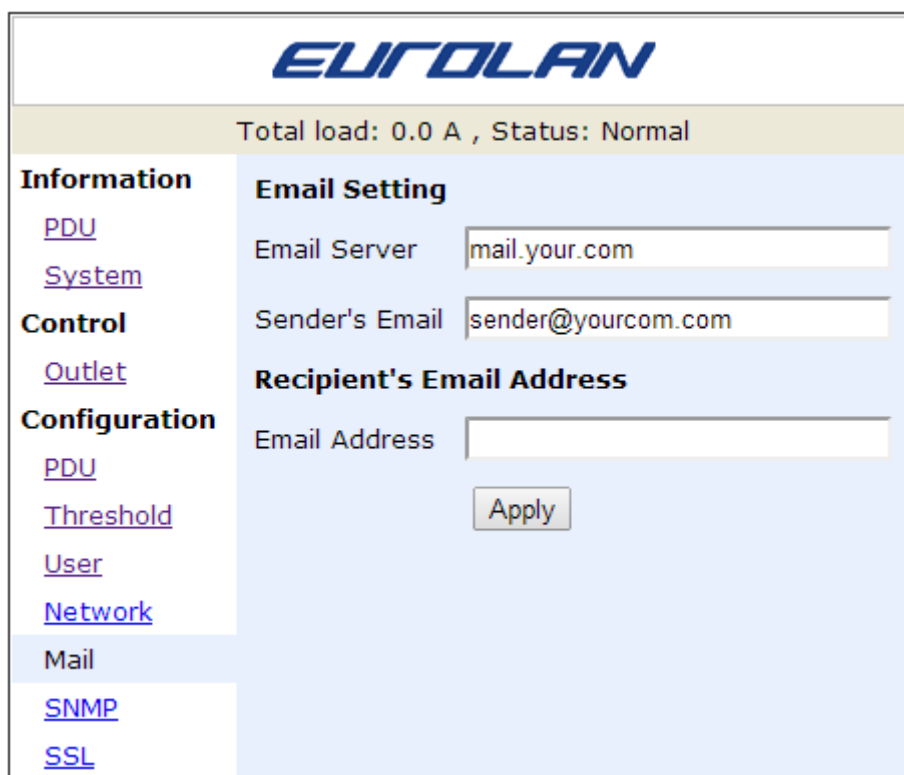

The screenshot displays the EUROLAN web interface. At the top, the 'EUROLAN' logo is centered. Below it, a status bar shows 'Total load: 0.0 A , Status: Normal'. The left sidebar contains a navigation menu with categories: 'Information' (links to PDU, System), 'Control' (link to Outlet), 'Configuration' (links to PDU, Threshold, User, Network), 'Mail' (selected), 'SNMP', and 'SSL'. The main content area is titled 'Email Setting' and includes three sections: 'Email Server' with a text input field containing 'mail.your.com', 'Sender's Email' with a text input field containing 'sender@yourcom.com', and 'Recipient's Email Address' with a text input field. An 'Apply' button is located below the 'Email Address' field.

Configuration: SNMP

When event occurs, PDU can send out trap message to pre-defined IP address.

Trap Notification: Set receiver IP for trap.

Community: Set SNMP community.

Read Community is public and fixed.

Default Write Community is "public" and can be modified by user.

EUROLAN

Total load: 0.0 A , Status: Normal

Information
[PDU](#)
[System](#)

Control
[Outlet](#)

Configuration
[PDU](#)
[Threshold](#)
[User](#)
[Network](#)
[Mail](#)
SNMP
[SSL](#)


Trap Notification
Receiver IP

Community
Read **public**
Write

Configuration: SSL

Enable SSL for web communication.

User must input the correct ID and password to enable SSL function. The ID and password must be the same with the setting in "User".

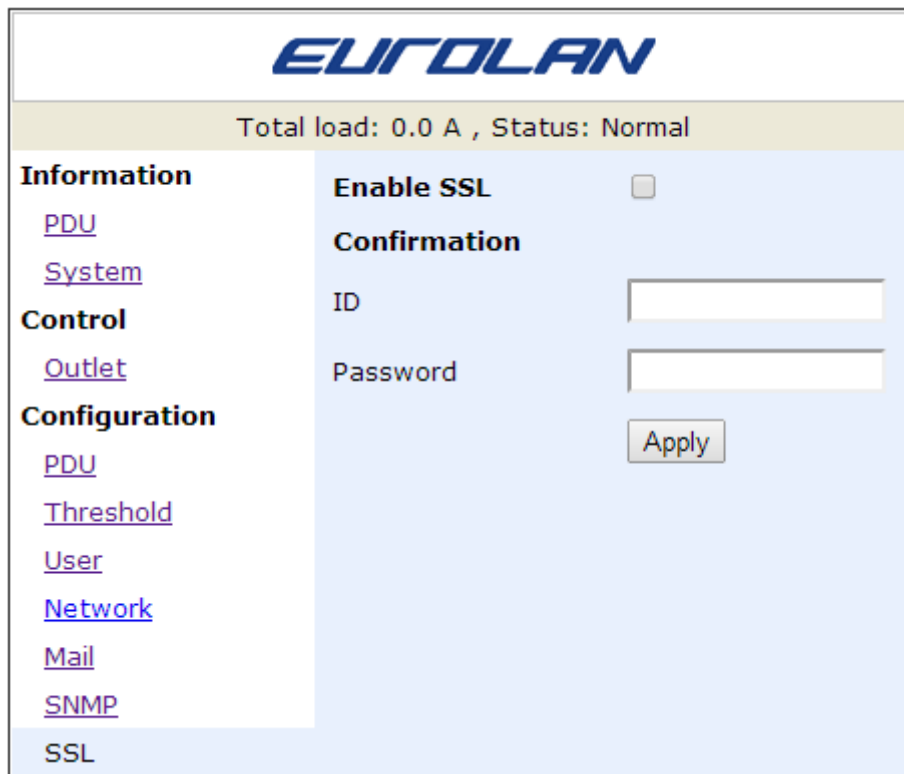

The screenshot displays the EUROLAN web interface. At the top, the logo "EUROLAN" is shown in blue. Below it, a status bar indicates "Total load: 0.0 A , Status: Normal". The main content area is divided into two columns. The left column contains a sidebar with navigation links: "Information" (with sub-links "PDU" and "System"), "Control" (with sub-link "Outlet"), "Configuration" (with sub-links "PDU", "Threshold", "User", "Network", "Mail", "SNMP", and "SSL"), and "SSL" (highlighted). The right column is titled "Enable SSL" and features a checkbox. Below this is a "Confirmation" section with input fields for "ID" and "Password", and an "Apply" button.

Eurolan AB

Johannesfredsvagen 12, SE-168 69
Bromma
E-mail: info@eurolan.com
Internet: www.eurolan.com
Phone: +46 8 41047980
Fax: +46 8 7510080

Russia

15, bld. 1, 7-th Kozhukhovskaya Str.,
Moscow, Russia, 115193
E-mail: moscow@eurolan.com
Internet: www.eurolan.com
Тел. +7 495 2870758

EUROLAN

© Copyright Eurolan AB

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from the publisher.

