

User Manual

Color Video Door Phone CDV-704MHA



www.commax.com

COMMAX Co.,Ltd.



- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.



Greetings

- Thank you for choosing COMMAX.
- Please read this manual carefully before you use the product.



Table of contents

Greetings	1
Table of contents	1
1. Warnings and caution	2
2. Parts Names	4
3. How to use the product	5
4. How to install	20
5. Installation diagram	20
6. Wiring diagram	21
7. Package contents	22
8. Specifications	23
9. Safe operation guide	23



1. Warnings and caution

Please follow the things described below in order to prevent any danger or property damage.



Warning

It may cause a serious damage or injury if violated.



Caution

It may cause a minor damage or injury if violated.



Prohibition.



No disassembly



No touch



Must follow strictly.



Shows plugging out the power cord without an exception



Shows the warning and caution for an electric shock.



Shows the warning and caution for a fire.



Warning

Power & Installation

Please don't use several products at the same time on one power socket.


- It may cause a fire due to an abnormal overheating.



Prohibition Fire

Please don't bend the power cable excessively or it may cause an electric shock.

- fire when using a damaged power cable.

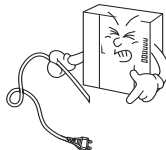

Prohibition Electric shock Fire

Please don't handle the power cable with a wet hand.


- It may cause an electric shock.



Prohibition Fire

Please plug out the power cable from the socket when not using it for a long period of time.


- It may shorten the product lifespan or cause a fire.

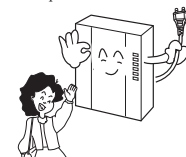

Request Fire

Please don't install the product in the place where there is much oil, smoke or humidity.


- It may cause an electric shock or fire.

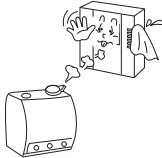

Prohibition Electric shock Fire

Please don't install the product with the lightning and thunder.

- It may cause an electric shock or fire.

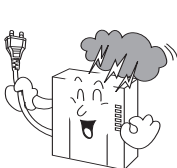

Prohibition Electric shock Fire

Please don't use and connect this product with other products with different rated voltage


- It may cause a disorder or fire.



Prohibition Fire

When installing the product that generates heat, please install the product away from the wall (10cm) for the ventilation.

- It may cause a fire due to the increased internal temperature.

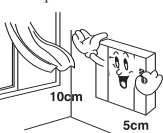

Prohibition Fire

⚠ Warning

Cleaning & Use


Please don't disassemble, repair or rebuild this product arbitrarily (please contact the service center if a repair is needed).

- It may cause an electric shock or fire.




If an abnormal sound, burning smell or smoke is coming out of the product, please plug out the power cable and contact a service center.

- It may cause an electric shock or fire.



Please don't insert any metallic or burnable materials into the ventilation hole.

- It may cause an electric shock or fire.

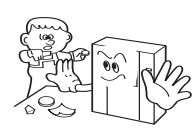

Please use only the designated batteries for the products of using DC power.

- It may cause an electric shock or fire.




⚠ Caution

Power & Installation


Please plug the power cable firmly into the inner end.

- It may cause a fire.

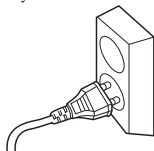


Please hold the plug tightly when unplugging the power cable (a part of the copper wire may be disconnected if the grabbing is only made on the cord when pulling out the cable).

- It may cause an electric shock or fire.



When connecting the power cables after cutting the cable, please install the product with power off.

- It may cause an electric shock or fire.

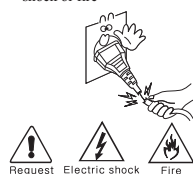


When installing the product, please fix it firmly while using the wall-mounting unit and screws.

- It may cause an injury from the falling object.




Please be careful when using an AC circuit breaker since there is a possibility of an electric shock.




Please check the use voltage and current for the DC-only products and use the appropriate rectifier.

- It may cause a fire.

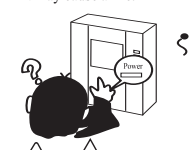

Please avoid direct rays of the sun or heating devices at a time of installation.

- It may cause a fire.

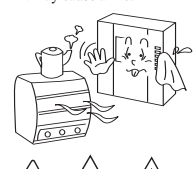

Please don't install the product on an unstable place or small support board.

- It may cause an injury if it falls down while in use.



Cleaning & Use


When cleaning the product, please rub it with a soft and dry cloth after plugging out the power cable. (Please don't use any chemical products such as wax, benzene, alcohol or cleanser.)



Prohibition

Please don't drop the product on the ground and don't apply a shock.

- It may cause a failure.

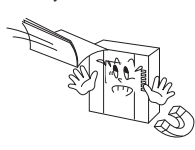

Prohibition

Please use the designated connection cable within the maximum calling distance designated for the product.


- It may reduce the product performance.



Request



2. Parts Names

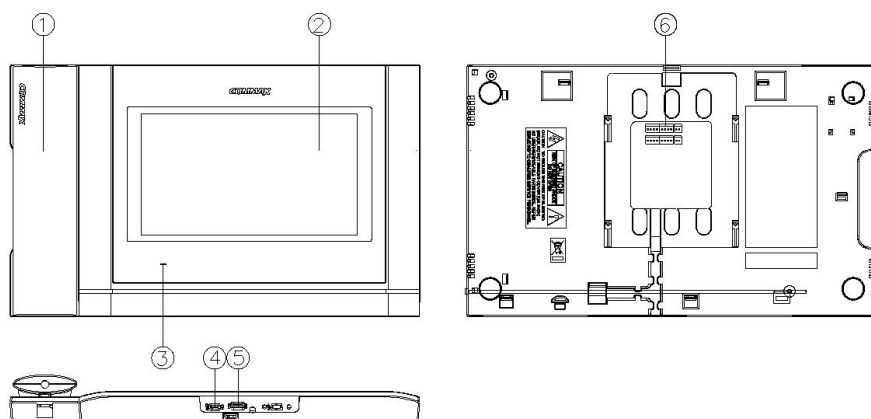

No	Parts	No.	Parts	No.	Parts
1	Handset	2	Touch LCD	3	Power LED
4	Power switch	5	Micro SD card slot	6	Connection terminal



3. How to use the product

- ※ Caution : When you are holding the handset while the hook switch is off and someone may push the button of camera, you may lose your hearing because of high volume of calling sound.
Do not hold the handset at your ear when you press hook switch to switch call.

3-1 Main screen




No.	Menu	Details
1	Monitor	View the door camera - You cannot use it if door camera is not connected
2	CCTV	Monitoring CCTV - You cannot use it if CCTV is not connected
3	Interphone	Move to Interphone menu
4	Playback	Move to the list of recorded images and videos
5	Option	Move to the menu 'Options'
6	Mute Icon	Indication of mute status
7	Date & Time	Indication of Date and Time, Touch to move to the menu 'Set-up'

* Cautions

- Please set up date and time before use.
. If you do not set up, some problems in saving still-cut image and video-clip might happen.
- When some monitors reboot for any reason, other monitors which are connecting can be stopped for normal operation.

3-2 Monitor

- The following screen will be shown when calling from door camera or touching the button 'Monitor'.
- The below screen will last for 30 seconds.
- Monitoring is not available in case of no connection of the door camera.
- When you use a one monitor, you cannot use other monitors for monitoring/ CCTV/ Interphone.

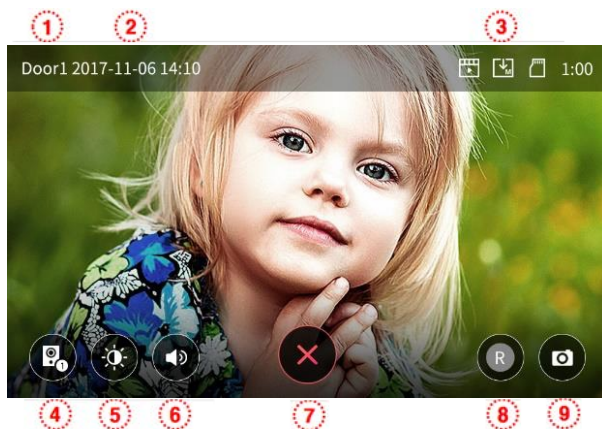

- ① Selected camera: Selected camera will be shown on the screen.
- ② Date & Time: Current date and time will be indicated.
- ③ Storage (Saving) icons: Icons for motion detection and recording will be indicated.

- Details of icons



Storage format: Images / Videos (In Motion detection mode)



Storage mode: MANUAL / AUTO



SD card status: Insertion / Full memory

- ④ Split screen view: Split monitoring of door cameras is available.
It's not available to use if there is only one camera installed.
- ⑤ Video quality adjustment: Door camera Display setting
 - Brightness/ Luminosity / Chroma adjustment is available after pushing the button.
 - The range for adjustment is 0-100. There is a button located on the right upper for initialization.



⑥ Volume control: You can control calling tone.

- Push the button in order to adjust the volume.

(You can control from 0(MUTE) to 3 level. Initial level is set for level 2.)



⑦ Call cancellation : To cancel the call when you get a call from door.

- After call is connected, the button will be changed as follows.



Door open : To open the door.



End call : To end a call.

⑧ Video-clip storage (saving): To store (save) a video-clip.

- When you touch a button, you can store a video-clip.

(When you set an auto-storage mode, a video-clip is automatically stored)

- Max 90 seconds per one storage (Call connection 30 seconds + Calling 60 seconds)
- The below icon will be shown during storage, and the remaining time will be shown on the right upper.



-If you want to stop storage, you should touch the icon.

⑨ Image (Still-cut image) storage: To store (save) a still-cut image.

- When you touch a button, you can store images. And the below icon will be shown during storage.



*Calling of visitor

- ① When a visitor calls from entrance, you can hear calling tone(sound) and the visitor's image appears on the monitor.
 - Max 30 seconds for call connection time.


- When you set an auto-storage mode, video-clip and image are automatically Stored.
- ② By picking up the handset, you can talk to a visitor. And when you touch a door-open button, the door will be opened.
 - Max 60 seconds for calling time.
 - While a video-clip is being stored, you can re-store a video-clip for 60 seconds from call-connecting moment.
 - You can open the door when the screen is on. And, it is possible only when door camera is interlocked with door release function.
- When you touch a door-open button, the below door-open icon  will be shown in the center of screen. But door-open sound will not work during video-clip and image storage.
- ③ When the other call comes from the other entrance, the current call is finished and the other call is connected.
- ④ If you put down the handset, the call is end. And the main screen will be shown.

* Calling of additional monitors

- ① In case of more than 2 monitors, when a visitor calls from door camera (entrance), a calling tone(sound) will be ringed in all monitors. And a visitor's image will be shown in all monitors.
 - Max 30 seconds for call connection time.
- ② When one monitor connects with door camera, the main screen (4-1) will be shown in other monitors. And Monitoring, CCTV, Interphone buttons of other monitors will be deactivated.
- ③ When you touch a door-open button after calling, the door will be opened.
 - Max 60 seconds for calling time.
 - You can open the door when the screen is on.
- ④ If you put down the handset, the call is end. And the main screen will be shown.
 - And then, Monitoring, CCTV and Interphone buttons of other monitors will be activated.
- ⑤ When you touch a call connection button at additional monitors (ID2/ID3/ID4), the master monitor (ID1) will stop any of operating functions (Saving of images/video-clips, etc.,) and will display the main screen.

3-3 CCTV

- When you touch a CCTV button, the below screen will be shown.
- Monitoring time is Max 60 seconds
- You can save the video-clip within monitoring time.
- You cannot use CCTV functions if cameras are not installed.
- When you use a one monitor, you cannot use other monitors for monitoring/ CCTV/ Interphone.

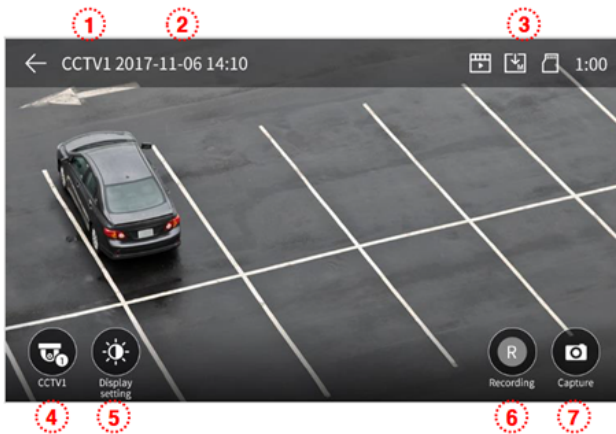

- ① CCTV sign: To show the current working CCTV.
- ② Date&Time: Current date and time will be indicated.
- ③ Icon set: To show motion detection and video storage.(Monitor section for more details)
- ④ CCTV screen change: To see CCTV 1 screen and CCTV 2 screen.
 - You cannot use this function when only one camera is connected.
- ⑤ Video quality adjustment: To change Brightness/Light & Shade/Chroma. of CCTV
(Monitor section for more details)
- ⑥ Video storage: To store (save) a video-clip.
 - When you touch a button, the storage will be started.
 - The below icon will be shown during image storage. And the remaining time will be shown on the right upper.



-If you want to stop storage, you should touch the icon.

- ⑦ Image storage: To store (save) a still-cut image.
 - When you touch a button, you can store images. And the below icon will be shown during storage.




*** Reference(Door camera and CCTV are same in the below issues.)**

- ① Video-clip cannot be stored while SD card is not inserted.
 - In this case, images can be stored in the monitor's embedded memory.
(Max 50 still-cut images).
 - You can use as below when you need back-up of images which are stored in the monitor's embedded memory.
 - 1) Turn off the monitor and then insert SD card. Turn on the monitor. And then the images are automatically stored in SD card.
 - 2) You can check the file through your computer. ([**backup**] folder] in SD card)
 - 3) You can check date, camera source, store method, and file type with file names.
 - Camera source (D1, D2, C1, C2)/ Manual (0), Auto (1)/ 0(Verified file), 1(New file)
 - For example, a new file which is automatically stored by camera D1 will be shown as D111.
- ② The image and video-clip can be stored while SD card is inserted. The maximum storage size depends on the capacity (storage size) of SD card.(Refer to 19 pages)


3-4 Interphone[=Extension monitors : Master monitor & Slave monitors]

- **When you touch Interphone button, the below screen will be shown.**
- **When you use a one monitor, you cannot use other monitors for monitoring/ CCTV/ Interphone.**

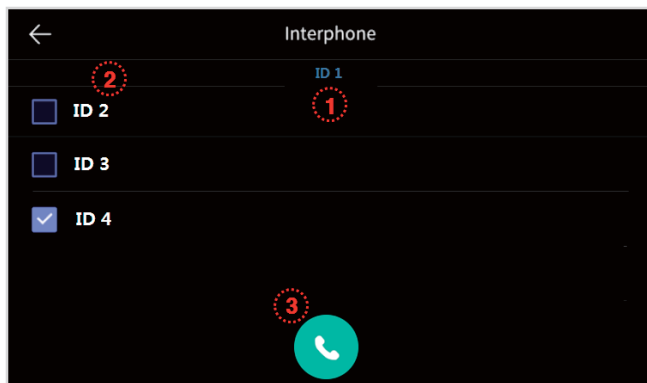


- ① ID sign : To show my current interphone ID.

- ② Interphone selection : To select an interphone which I want to connect.
(duplicate/double selections are possible)
- ③ Call connection: To call and answer a selected interphone.
- Pick up the handset which is connected with a interphone.
- After you select an interphone and touch a call connection button in the above screen, a new screen in the next page will be shown and calling tone (sound) from the selected interphone will be ringed.
- The simultaneous call connections to all interphones are possible, and the mutual calling among interphones are possible.
- The button of unselected interphones will be deactivated during the mutual calling between selected interphones. And, main screen will be shown for unselected interphones during the mutual calling between selected interphones.
- Interphone's screen of sending call connection.

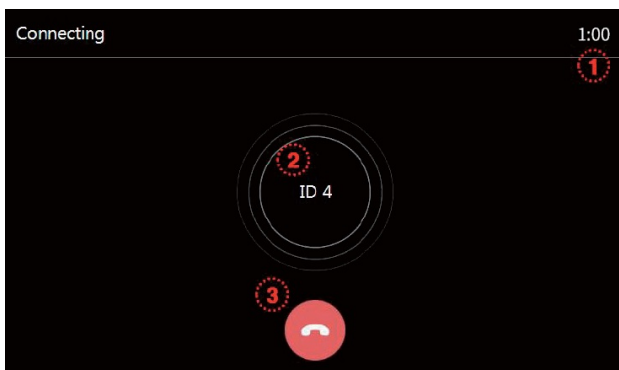

- ① Call connection & Calling time :
 - To show remaining call connection time and remaining calling time.
 - Max 30 seconds for call connection.
 - Max 60 seconds for calling time (In case of receiving call connections from all interphones, the calling time will be calculated from the latest call connection for 60 seconds).
 - If you put down the handset, talking is finished and turns to stand-by mode.
- ② The other party's ID sign : To show the other party's ID.
 - When you call more than 2 interphones, all IDs will be shown on the screen.
- ③ Call end : To finish call connection and calling.

- Interphone's screen of receiving call connection.

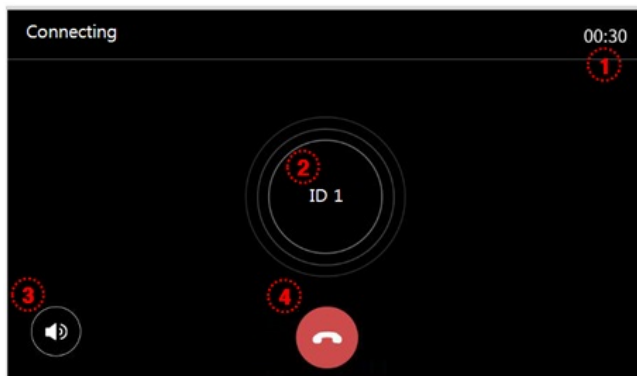


- ① Call connection& Calling time : You can talk with interphone by picking up the handset
To show remaining call connection time and remaining calling time.
 - Max 30 seconds for call connection.
 - Max 60 seconds for calling time. (In case of call connections from all interphones, the calling time will be calculated from the late call connection for 60 seconds)
 - If you put down the handset, talking is finished and turns to stand-by mode.
- ② The other party's ID sign : To show the other party's ID.
- ③ Volume control : To control calling volume.(0-3 level)
- ④ Call end : To finish call connection.


3-5 Playback

- When you touch Playback button, the below screen will be shown.
- You cannot store a video-clip less than 1 second.

<Photo>

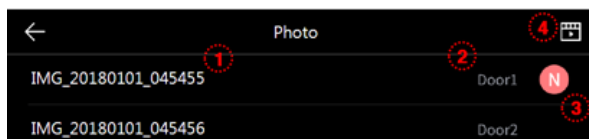


<Video-Clip>

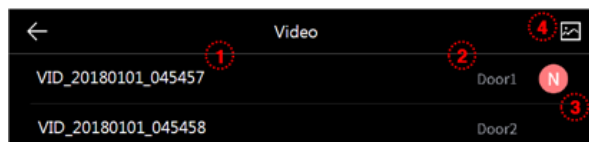


- ① Storage file name: To view the file.
- ② Storage source: To display the source camera of the saved file.
- ③ New file: To display new file.
- ④ List change : To change from still-cut image to video-clip (vice versa).

- To verify images.

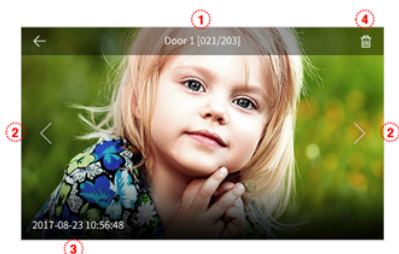

- ① Storage source & file No.
- ② Left/Right movement : To move the previous/next file.
- ③ Date &Time : Current date and time will be indicated.
- ④ Delete files: To delete images.

- To verify video-clip.

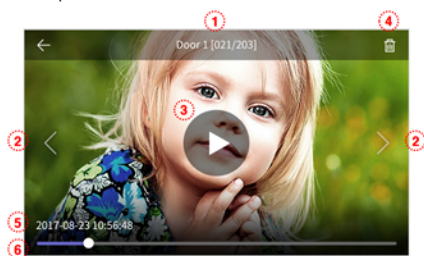

- ① Storage source & file No.
- ② Left/Right movement: To move the previous/next file.
- ③ Playing the file: To play the current video-clip.


During playback, the icon is changed by the pause button.

- ④ Delete the file: To delete the current playing file.
- ⑤ Date & Time: Current date and time will be indicated.
- ⑥ Video-clip time indication: The remaining time is displayed

3-6 Option

- When you touch option button, the below screen will be shown.
- When you select each item, the corresponding sub item is displayed on the right.
- If you do not do any action for 30 seconds after you get in Option menu, the main screen will be shown.

① Recording

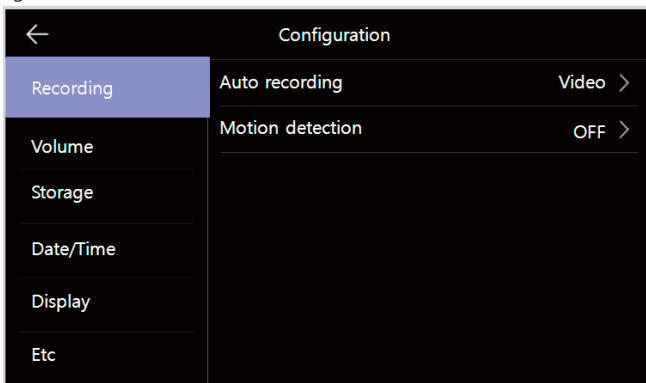


1) Auto recording

- To set the auto save mode. (Select between Photo / Video)
However, if there is no SD card, video mode cannot be selected.
- This function is only available when a call comes from a door camera (entrance).And you cannot save photos and video-clip manually until the automatic saving is started.
- Selecting OFF disables the auto save function.

2) Motion detection

- To set motion detection of the previously set camera.
- Functions of each menu are as following.

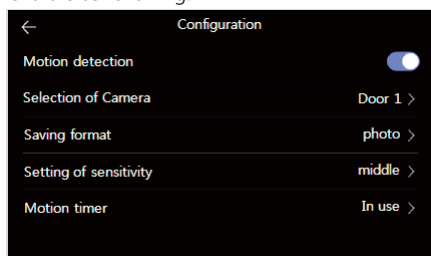

- Motion detection: To set enable / disable function.
- Selection of Camera: To select camera for monitoring. (Select from Door1/2, CCTV1/2)
- Saving format: To select storage method.(Select between Photo / Video)
- Sensing of sensitivity: To set sensitivity.(Select among High / Middle / Low)
- Motion timer: To setup the timer function activation.(Motion detection activation time)

Once activated, you can set the timer, start / end time.

* Reference

- When detecting motion, the photo is saved for 1 scene and the video-clip is saved for 10 seconds.
- The LED is flickering during the saving of the video-clip. And, when you touch the screen, the saving is stopped.
- After saving, the front LED stops blinking, and the motion detection is started within 3 seconds.
- This function can be set / used only for an Interphone (monitor) set to master. (ID 1)
- In the night or dark place, the LED of door camera is always on while this function is working.

② Volume

Configuration		
Recording	Volume	>
Volume	Touch tone	ON >
Storage	Interphone calling tone	sound1 >
	Door1 calling tone	sound2 >
Date/Time	Door2 calling tone	sound4 >
Display		
Etc		

1) Volume

- When individual door camera (entrance) and intercom calls, you can change the calling tone individually.
- You can change the calling tone from 0 (mute) to 3 level.


2) Touch tone

- To turn on / off the touch tone.

3) Interphone, Door1, Door2 calling tone

- You can select calling tone of interphone and individual door camera. (Door1, Door2)
- 6 types of calling tones are available.

③ Storage

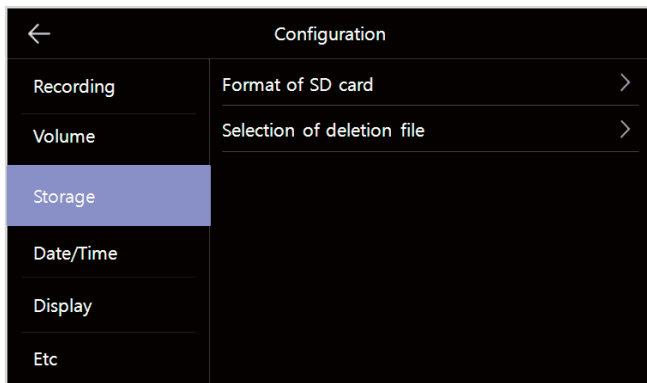

1) Format of SD card

- To initialize the SD card.
- It takes about 1 min. for initialization.
(It can be different by types of SD card).


2) Selection of deletion file

- To delete the saved images and videos.
- The time required varies depending on the file size.

* Cautions


- It is not available to receive a call while initializing SD card or deleting saved files.
- If you start initialization of SD card, it is not possible to stop it.
In case of inevitable ending initialization, it is necessary to start again from the beginning.

④ Date/Time

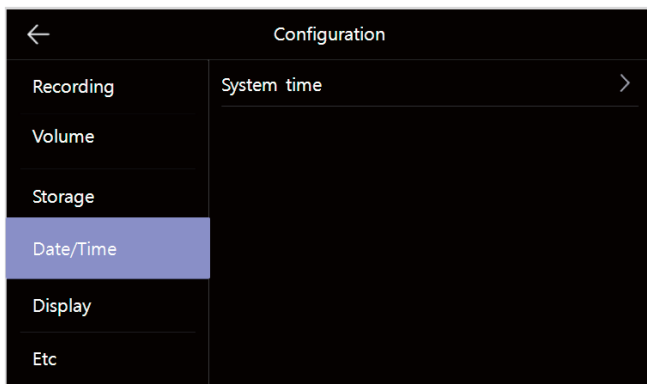


1) System time

- To Set-up Date and Time.
- The changed time will be displayed on the main screen afterward.

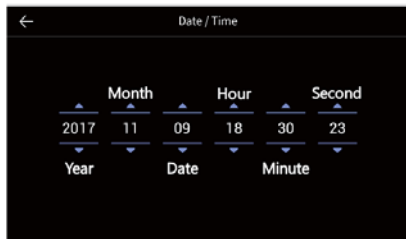

⑤ Display

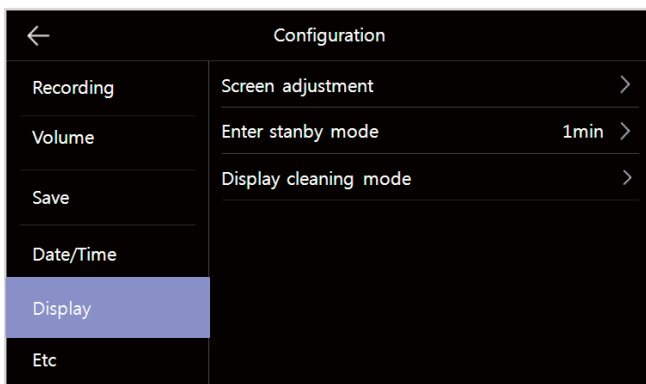

1) Screen adjustment

(In this case, you can adjust the display of door camera.)


- When you use a one monitor, you cannot use other monitors for monitoring/ CCTV/ Interphone.
- The range for adjustment is 0-100 level. There is a button located on the right upper for initialization.



2) Enter stand-by mode

- To set up stand-by mode.

If you do not do any action during the setting time, the monitor shows stand-by mode

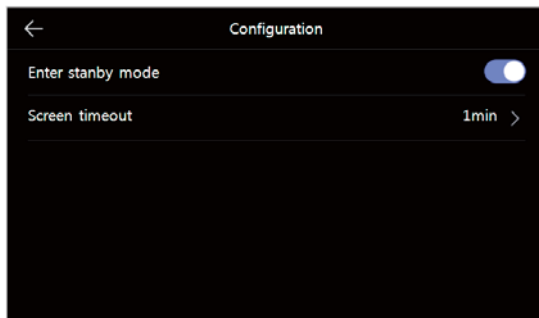

-Enter standby mode : To set up a time to activate stand-by mode

(If you deactivate the set-up time, it automatically sets up with 30 seconds.)


- Screen timeout: To set amount of time for stand-by mode. (Select among 1/2/3 minutes)

3) Display cleaning mode

- When selecting 'Cleaning mode', the touch screen is deactivated for 30 seconds.

(You cannot stop this function until it is finished.)

⑤ Others

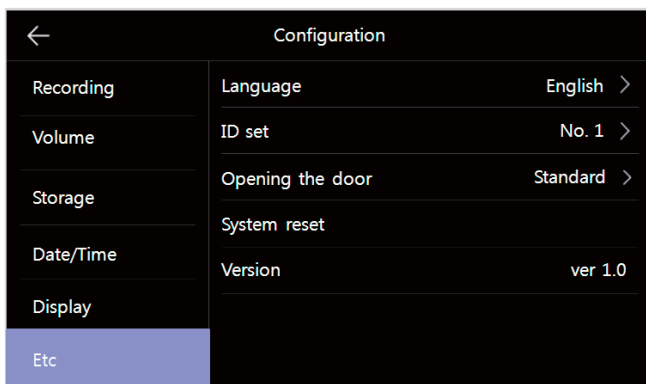

1) Language

- To select the languages.(9 languages)

한국어	English	le français
русский	español	简体中文
Język polski	Türkçe	Čeština

2) ID set

- In case of installing more than 2 monitors, ID setting is required for inter-communication.

- Master monitor will be the first ID (ID No.1). Individual door camera and CCTV should be connected with the master monitor.

***Cautions**

- Please check the duplication of each ID.
The monitors might operate abnormally in case of ID duplication.

3) Opening the door

- To set up door-opening method.
Standard: To open the door during calling.
Fast: To open the door during calling.

4) System reset

- To proceed with initialization.

5) Version

- To display the current program version.

*** Note on using Micro SDHC Card**


- 1) Available Micro SDHC Card
 - SDHC CLASS 10 / MAX 32GBytes
- 2) The number of saving for capacity

	Embedded memory	Micro SDHC Card		
Capacity	16 MBytes	4 GBytes	16 GBytes	32 GBytes(MAX)
Image	50Cuts	128 Cuts		
Video (Max 90 secs)	-	20 Cuts	80 Cuts	160 Cuts

*** Precautions on using Micro SDHC Cards**

- 1) Please, do not turn on/off, insert or remove Micro SDHC card during playing, saving or formatting and so on. It might be caused of malfunction, harm or damage goods.
- 2) When the saving capacity of Image is over, then it automatically deletes the oldest Image and saving the newest Image instead.
- 3) The capacity of video file may vary depending on the environment being stored
- 4) If the saving capacity of Micro SDHC card is over, you cannot save new video-clips. Be sure to delete old video-clips before using. (If you do not delete, it can be saved with image type)
- 5) If you use a bad micro SDHC card, you may experience problems with your product


4. How to install

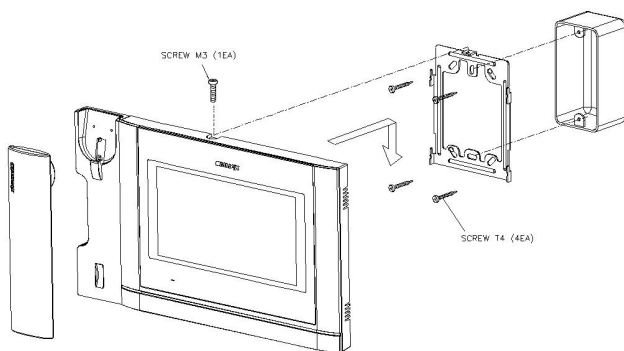

Note

- Avoid installing the product in the area of direct sunlight.
- The position of the unit's body should fit the standard height range.
(Recommended height range is 1450 ~ 1500mm)
- Avoid installing the product exposed to gas exposure, magnetic force, in humid temperatures, as it may damage the condition and performance of the product.

5. Installation diagram


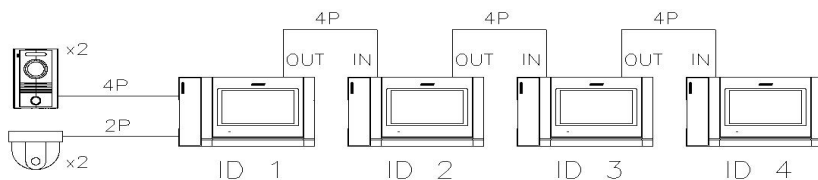


Note:

1. Individual door camera (entrance) and CCTV must be connected to the master monitor (ID 1), and master monitor must be installed at the first stage.
2. Be careful not to change IN / OUT wiring.



6. Wiring diagram

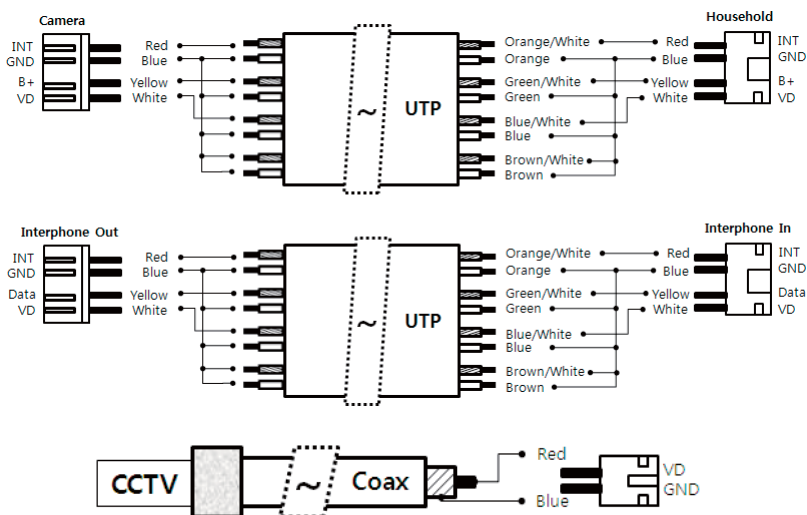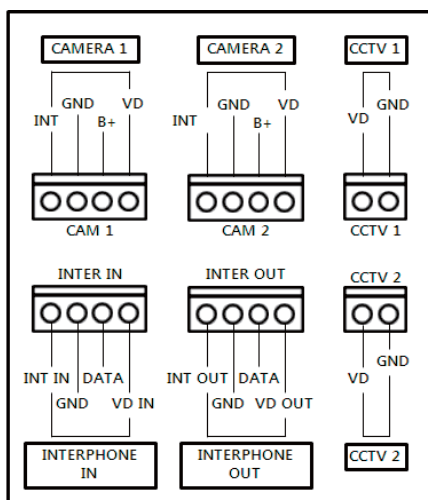


Note:


1. In case, if there is a high-voltage power line in the area of installation, use metal tube coaxial cable for wiring.
2. Beware of wrinkling of line coating and cable stick-outs as it may cause circuit shortage and operation inconvenience.
3. When connecting a monitor with a camera, make sure power switch is turned off.



7. Package contents

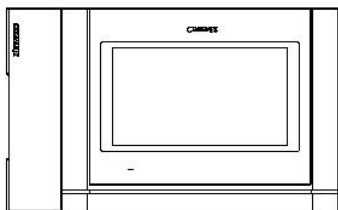


MONITOR



WALL BRACKET




MANUAL



(T)4 x 18mm
WALL BRACKET
MOUNTING SCREW



(M)3 x 6mm
MONITOR FIXING
SCREW



4P (4EA)/ 2P (2EA)
CONNECTOR

- | | |
|------------------------------------|-----|
| ① Monitor(CDV-704MHA)----- | 1EA |
| ② Wall bracket for monitor----- | 1EA |
| ③ User Manual----- | 1EA |
| ④ Wall bracket mounting screw----- | 4EA |
| ⑤ Monitor fixing screw----- | 1EA |
| ⑥ Connector 2P----- | 2EA |
| Connector 4P----- | 4EA |

* Connecting Device

- Door Camera : DRC-40KHD
- CCTV : CAU-1M04 Series (AHD Type)



8. Specifications

Model		CDV-704MHA	
Transmission Method		Camera 4 wire (polarity), CCTV 2 wire (polarity) Household unit(monitor) expansion port4 wire (polarity)	
Power Source		100V-240V~, 50/60Hz	
Consumption		Stand-by : 4 W Max : 15 W	
Communication		HAND-SET type(Simultaneous communication)	
Monitor		7" FULL TOUCH LCD	
Video subscription time		Individual door camera call connection / monitoring: 30 ±5sec Calling: 60 ±5sec Interphone call connection: 30 ±5sec / Calling: 60 ±5sec	
Wiring Distance	UTP CAT 5e. Standard	Camera /CCTV <-> (ID 1)	Household unit (monitor) <-
		Household unit (monitor)	>Household unit (monitor)
		28 meters (MAX)	15 meters (MAX)
		Resistance under 10Ω per 100 meters on UTP Cat 5e	
Operating Temp.		0 ~ +40℃ (32°F ~ 104°F)	

* Connectable camera : DRC-40KHD, DRC-4CPHD (1.3M pixel)



9. Safe operation guide

- Make sure to turn on the product.
- In case if physical damage or operation failure is detected, do not hesitate to contact Service Center.
- All electric power must be blocked by the building blocking device.
- Do not place water bottles or flowerpots upon the product.
- Please, turn the power off when installing or repairing the product.

COMMAX

COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea
Int'l Business Dept. Tel. : +82-31-7393-540~550 Fax. : +82-31-745-2133
Web site : www.commax.com

Printed In Korea / 2018.04.104

