

Как инициализировать (Веб 5.0)

1. Модель продукта и версия прошивки

Это руководство основано на прошивке WEB 5.0

Интерфейс может отличаться в зависимости от некоторых моделей и прошивок.

2. Описание операции

Шаг 1. Подключение кабеля


Пожалуйста, перед использованием подключите компьютер к источнику питания и фотокамеру с помощью сетевого кабеля.




Шаг 2. Настройка региона.

Откройте браузер IE, введите IP-адрес камеры (по умолчанию 192.168.1.108) в адресную строку и нажмите Enter.

Выберите регион и язык.

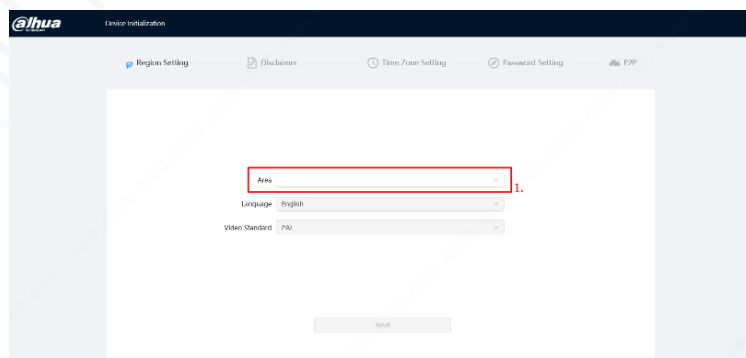

После выбора региона можно выбрать стандарт видео NTSC или PAL.



Шаг 3. Подпишите заявление об отказе от ответственности

Прочитайте Отказ от ответственности, если вы согласны, установите флажок и нажмите "далее".

alhua Device Initialization

Region Setting | Disclaimer | Time Zone Setting | Password Setting | P2P

SOFTWARE LICENSE AGREEMENT

Last modified: Jan 15, 2020

1. PREAMBLE

IMPORTANT NOTICE: PLEASE READ CAREFULLY:

1.1 This Agreement is a software license agreement between you and Zhejiang Dahua Technology Co., Ltd. ("Company" or "We"). Please read this software license agreement (hereinafter referred to as "Agreement") carefully before using the Software. By using Company Software, you are deemed to agree to be bound by the terms of this Agreement. If you do not agree to the terms of this Agreement, please do not install or use the Software, and click the "Disagree" button (if there is any provision for "Agree" or "Disagree"). If the Software you get is purchased as part of Company device, and you do not agree to the terms of this Agreement, you may return this device/Software within the return period to Company or authorized distributor where you purchased from for a refund, but it should be subject to the Company's return policy.

1.2 Consent to use of data

Your personal information, including phone number, product SN and MAC address of the user, may be required in order to provide certain functions, such as on-line updates, and resetting password. When dealing with such information, Company will act in accordance with the data processing principle provided by law and using proper technological measures and management system to make sure that your personal information is securely used and your legal rights are well protected.

Company click on to personal information protection and has made the Product Privacy Policy to disclose the important information about the collection, usage, share, storage, and deletion of personal information. In all circumstance, your personal information will be handled according to the Product Privacy Policy. You

☐ I have read and agree to the terms of the software license agreement and privacy policy.

1. Next

2.

Шаг 4. Настройте часовой пояс

Если вы хотите синхронизировать часовой пояс с ПК, выберите функцию "синхронизировать с ПК".

alhua Device Initialization

Region Setting | Disclaimer | Time Zone Setting | Password Setting | P2P

Date Format: YYYY-MM-DD

Time Zone: UTC+8:00 Coordinated Universal Time+8

System Time: 2023-08-12 11:02:16

WiFi last modified on: 2023-08-12 16:00:16

☐ Sync with PC

Next

1.

2.

Шаг 5. Настройте пароль.

Введите имя пользователя и пароль. По умолчанию имя пользователя - admin.

Если у вас нет адреса электронной почты, снимите этот флажок.

alhua Device Initialization

Region Setting | Disclaimer | Time Zone Setting | Password Setting | P2P

Username: admin

1. New Password

2. Confirm Password

3. Email Address


☐ For password reset. Recommended or improved in time.

Next

Шаг 6. P2P


Нам необходимо получить ваш IP-адрес, MAC-адрес, название устройства, идентификационный номер устройства после включения P2P и подключения к Интернету. Вся собранная информация используется только для целей удаленного доступа.

Снимите флажок, если вы не согласны с включением функции

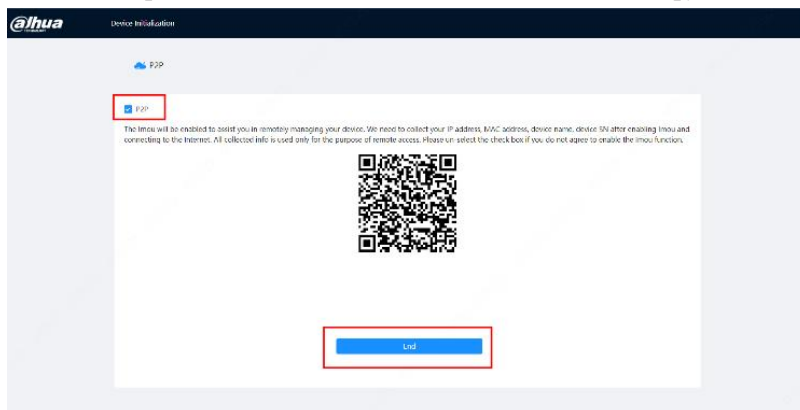

Шаг 7. Настройте IP-адрес

- Вход в устройство.
- Настройки > Сеть

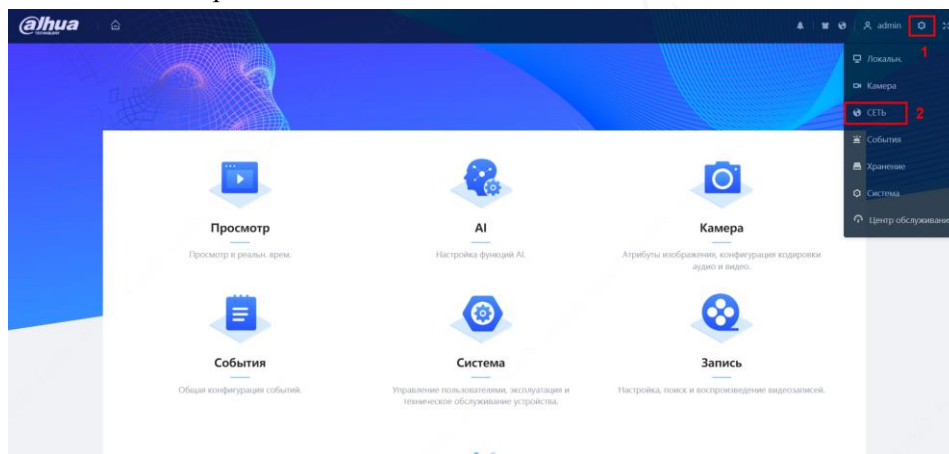

- Установите IP-адрес, шлюз и маску подсети камеры.

